



# G-FLOW™



## Structural Flow media

**G-FLOW 500L** is a structural flow media made with 100% glass fibers for infusion process. By its innovative design, it can drain the resin during infusion without adding an external or internal **flow media**. It offers the best compromise between mechanical properties and flow performance.

## DESCRIPTION




- Glass fiber Reinforcement
- A Specific design and textile geometry
- Warp and weft balanced
- Total weight: 500 gsm

## BENEFITS

- **G-FLOW™** provides high mechanicals properties.
- **G-FLOW™** allows faster infusion compare to external flow media. It's position into the structure does not impact really the resin flow.
- **G-FLOW™** is **100 x more permeable** than traditional reinforcements as NCF or Woven Roving.

## G-FLOW™, the best solution for your infusion process

- **Same mechanical performances** as standard structure: **G-FLOW™** replaces an external flow media and a structural reinforcement (0/90°)
- **Cost saving** for same mechanicals and permeability performances. Reduce preparation time/Less waste/Less disposal costs

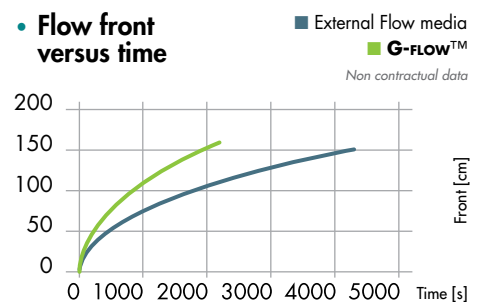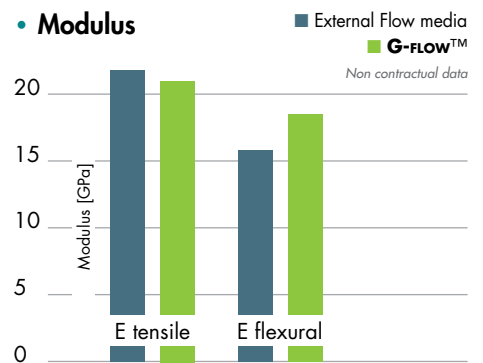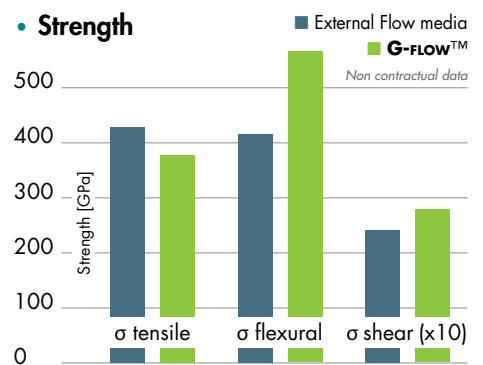

Comparison with 7 layers NCF 0/90 + External flow media versus 6 layers NCF 0/90 + G-Flow in internal position (3500gsm for each laminate)


# G-FLOW™

## FAQ

- Does **G-FLOW™** allow an isotropic flow ?
  - No, the flow is faster on the 0° direction vs 90°
  
- Can we use **G-FLOW™** inside a sandwich structure ?
  - Yes, we recommend to put **G-FLOW™** on each side of the core
  
- Can we put **G-FLOW™** against the vacuum bag ?
  - Yes, but we recommend to place **G-FLOW™** on the middle of the laminate
    - For Homogenous flow and better flexural properties
    - For Surface aspect
  
- Does **G-FLOW™** help the flow for thick structures (60 plies) ?
  - No for the Specific Z Permeability
  - Yes for the in plane Permeability (X,Y)
    - By using several **G-FLOW™** layers, we obtain a more homogenous front of resin (X,Y,Z)
  
- What is the risk of porosity with **G-FLOW™** ?
  - If the infusion is done correctly the porosity ratio is < 3%
  - To avoid bubble inside the laminate, a perfect control of the infusion parameters is recommended (as for all the internal flow media)

### • Position of **G-FLOW™**

For a better resin flow an alternation of 0°/90° is recommended to keep the reinforcement channels

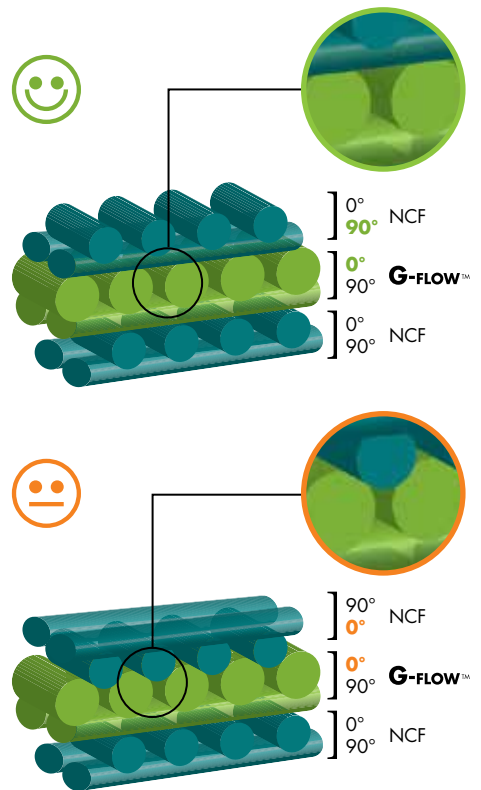

## CHOMARAT

[www.chomaraton.com](http://www.chomaraton.com)

**CHOMARAT**  
**Textiles Industries**  
 39 avenue de Chabannes  
 07160 Le Cheylard - FRANCE  
 Phone: +33 4 75 29 81 00  
 Fax: + 33 4 75 29 82 05

**CHOMARAT**  
**North Africa**  
 ZI de Grombalia  
 8030 Grombalia - TUNISIE  
 Phone: +216 722 55 412  
 Fax: +216 722 55 280

**CHOMARAT**  
**North America**  
 160 Alliance Boulevard  
 Williamston, SC 29697 - USA  
 Phone: +1 864 965 9497  
 Fax: +1 864 222 0832

**CHOMARAT**  
**Engineered Textiles**  
 36 Qingdao East Road - Taicang  
 215400, Jiangsu Province - PRC  
 Phone: +86 512 53737001  
 Fax: +86 512 53598908

Important: All properties are average values given for indication. Values are not intended for use as a specification. Information given in this document is based on the present knowledge of the technical properties of our product. All information is believed to be accurate but is given without acceptance of liability. Users should make their own assessment of the suitability of any product for the purposes required. Information contained in the present document refers to the product specifically indicated and cannot be valid in combination with other products. All sales are subject to our standard terms of sale which include limitations on liability and other important terms.